




Warning: Do not throw your product in municipal waste. This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulation for disposal of electronics products.

Installation Guide



66-AHD262ACSB-1

Part Description & Dimensions

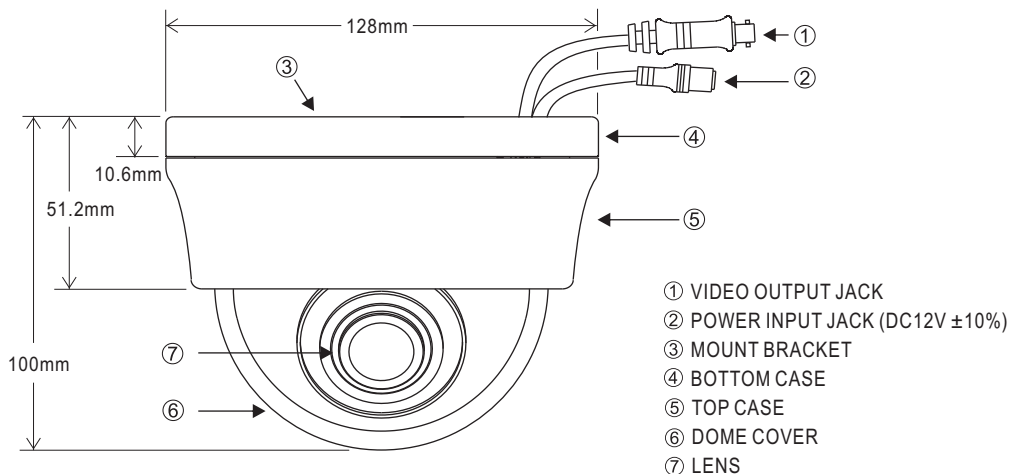


Installation



1. Remove the camera from the package and separate the top case from the bottom case (FIG.1), and remove the mount bracket from the bottom case (FIG.2).

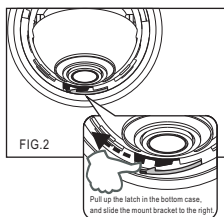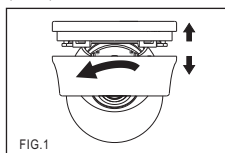


2. Use the provided screws (M4.0x25, Truss head screw) to secure the 3 "a" on the mount bracket (FIG.3) and mount it on the desired position.

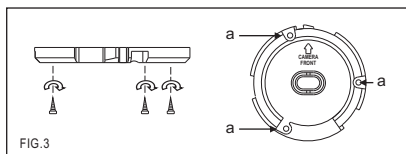

3. Align the camera lens with , and turn the bottom case clockwise to secure it to the mount bracket (FIG.4). Adjust the focus and zoom level of the lens for the desired object, and turn the camera to the desired angle (FIG.5).

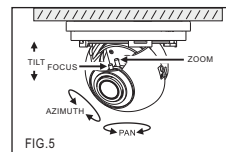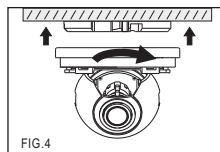


4. Turn the top case clockwise to secure it to the bottom case (FIG.6).

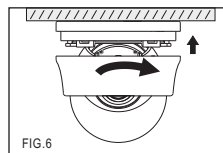

5. Connect to an Up-the-Coax (UTC) digital recorder that supports AHD-Coaxial protocol. Then use the 8-directional buttons (FIG. 7) to adjust settings for the best images.

USER OSD SETTING

 
- A.  (UP) : Press to move the cursor upwards or to select items.
- B.  (LEFT) : Press to move the cursor to the left and to select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- C.  (RIGHT) : Press to move the cursor to the right and select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- D.  (DOWN) : Press to move the cursor downwards or to select items.
- E. SET : Executes selections and displays a submenu for an item with the  mark.






安裝說明

部件說明及尺寸

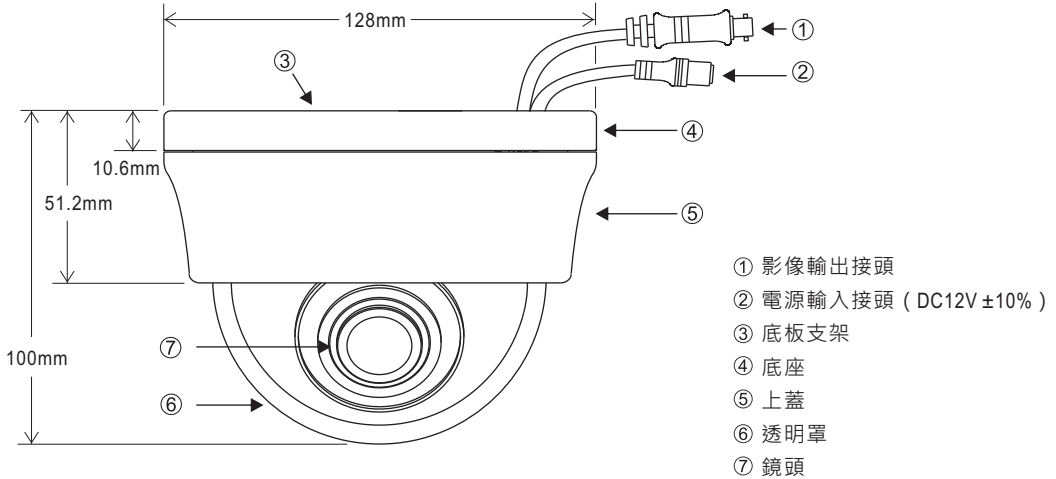


安裝


1. 取出攝影機，把底座與上蓋分開 (圖1)，再從底座取出底板支架 (圖2)。

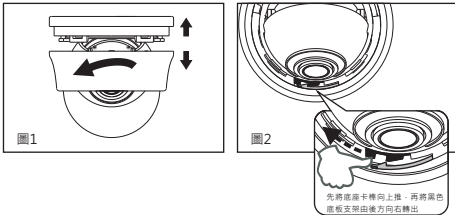


2. 使用所附的三顆螺絲 (M4.0x25，傘頭螺絲)，穿過底板支架上標示為「a」的地方 (圖3)，然後固定在所需的位置。

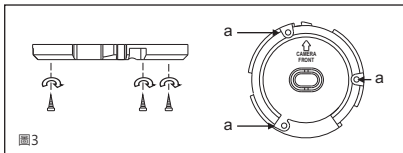

3. 保持攝影機鏡頭方向與底板支架的  為同一方向，將底座由順時針方向旋轉卡入底板支架 (圖4)。調整鏡頭的焦距、放大倍數到所需的成像畫面接著調整垂直、水平及傾斜角度 (圖5)。

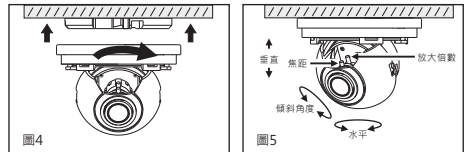

4. 將上蓋由順時針方向旋轉卡入底座 (圖6)。

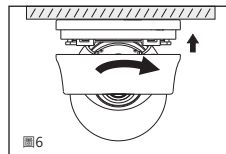

5. 連接有支援 AHD-Coaxial protocol 的 UTC (Up-The-Coax) 數位錄放影機，使用其螢幕選單上的八向按鍵 (圖7) 去調整設定，以取得最適當的影像。

使用者螢幕選單設定

- A.  (上): 按一下移動游標往上至所需的選項。
- B.  (左): 按一下移動游標往左及選擇所需的模式，或者調整其參數。按鍵每按一次，參數跟著改變一次。
- C.  (右): 按一下移動游標往右及選擇所需的模式，或者調整其參數。按鍵每按一次，參數跟著改變一次。
- D.  (下): 按一下移動游標往下至所需的選項。
- E. 設定：當遇到  標記時，按下後可顯示其螢幕選單。

