



ZR8022EX10/20

D/N 1080P HD Auto Focus IR IP Camera

Quick Installation Guide

CAUTION


- Do not drop or strike this equipment
- Do not install the equipment near any naked flames or heat sources
- Do not expose this unit to rain, moisture, smoke or dust environment
- Do not cover the opening of the cabinet with cloth and plastic or to install this unit in poor ventilated places. Allow 10cm between this unit and its surroundings
- Do not continue to operate the unit under abnormal conditions such as detection of smoke, strange smell or no display on screen while power is turned on
- Do not touch the power connection with wet hands
- Do not damage the power cord or leave it under pressure
- Do not operate this unit near magnet, speaker system, etc., to avoid unnecessary magnetic interference
- Connection cables should be grounded properly

The ITE is to be connected only to PoE networks without routing to the outside plant.

L'ITE ne doit être connecté que sur un réseau PoE sans routage vers l'alimentation extérieure.



Product Overview

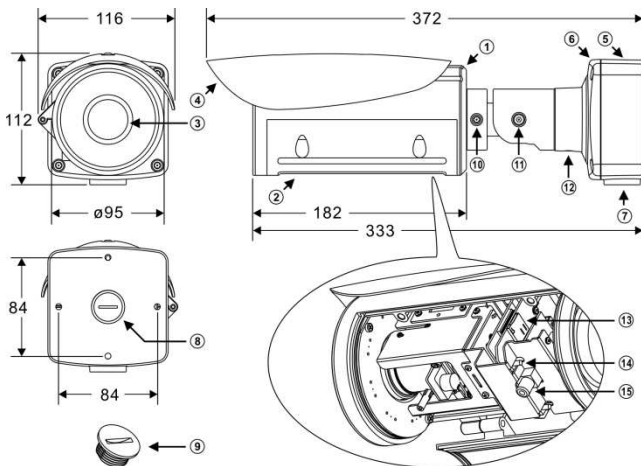

① TOP CASE

② BOTTOM CASE

③ LENS

④ SUN SHIELD

⑤ BOTTOM BOX

⑥ TOP BOX

⑦ SIDE HOLE

⑧ BOTTOM HOLE

⑨ HOLE PLUG

⑩ ADJUSTMENT SCREW A

⑪ ADJUSTMENT SCREW B

⑫ ADJUSTMENT SCREW C

⑬ MICRO SD CARD SLOT



⑭ RESET KEY

Restores the server back to factory default settings.



⑮ LIVE VIDEO OUTPUT RCA JACK

Installation



1. Remove the camera from the box. Separate the bottom box from the top box using a torx wrench (FIG.1), and remove the safety cable on the bottom box (FIG.2).

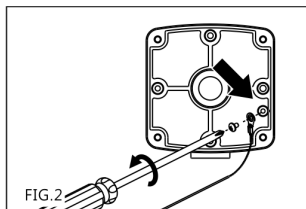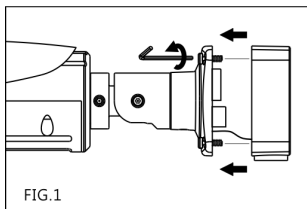



2. Secure the bottom box to anywhere you want by tightening the included truss-head screws (M4.0x25) to the mounting holes marked "a" on the bottom box (FIG.3 & 4).

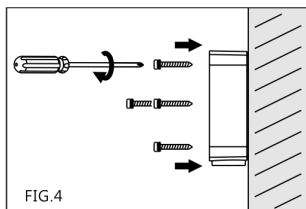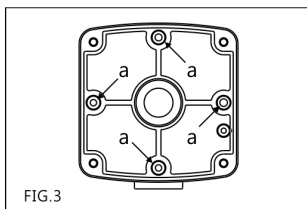



3. Firstly, insert the network cable and power cable through a pipe with 1/2" PT (FIG.5), and then secure the pipe to the side hole or bottom hole (FIG.6, please make sure the connection between the pipe and the side hole is watertight, and the side hole is facing downwards).

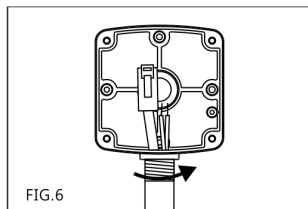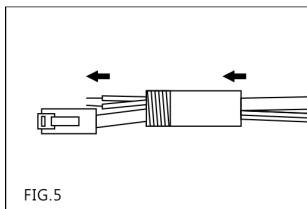







4. Attach the safety cable to the mounting hole on the bottom box (FIG.7), and connect the network cable and power cable to the camera's RJ-45 connector and power input, respectively (FIG.8).

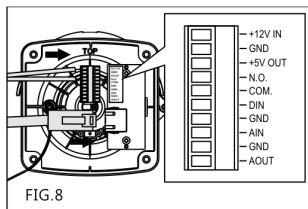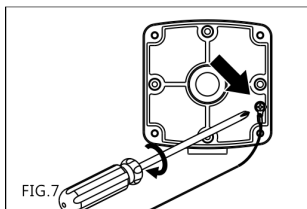

5. Use a torx wrench to lock the top box to the bottom box by tightening the screws (FIG.9 & 10).

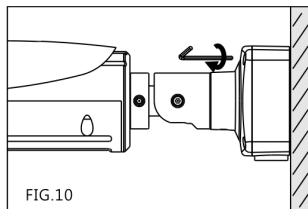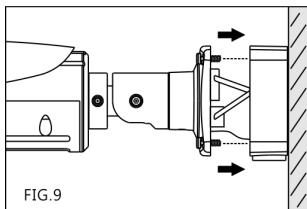


6. Adjust the three adjustment screws to turn the camera to the desired position. Then tighten the screws (FIG.11–16).

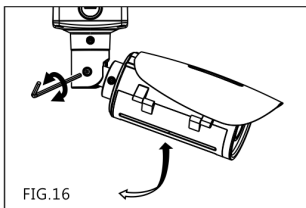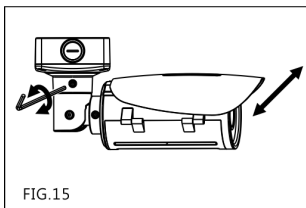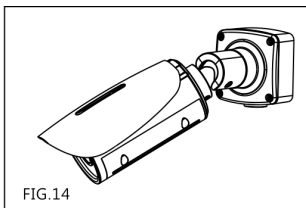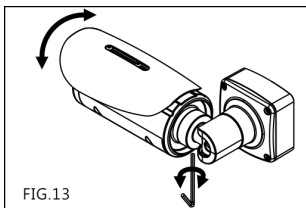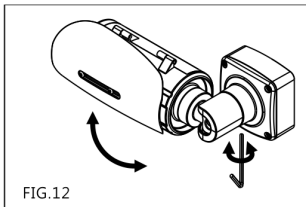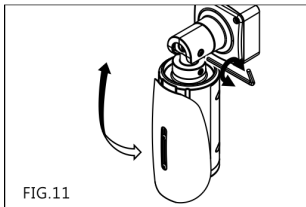


- Change the Outlet Position for the Network Cable and Power Cable

1. Loosen the hole plug on the bottom box and secure it to the side hole (FIG.17).

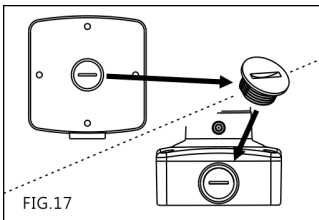


2. Insert the network cable and power cable through bottom hole on the bottom box (FIG.18), and then connect the network cable and power cable to the camera's RJ-45 connector and power input, respectively (FIG.8). For watertight installation, please refer to **Installation-3**.

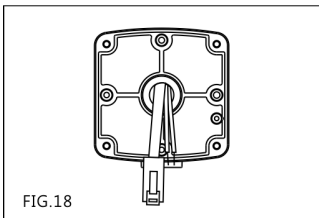


System Architectures

For connecting the HD IP cameras to a network, please follow one of the system architectures below:


- (1). Use a DC12V power adapter and a network switch to connect to the network.

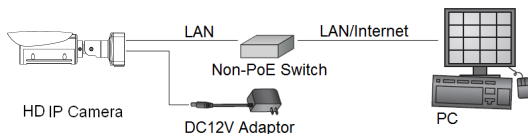

(2). Use a PoE network switch to connect to the network.

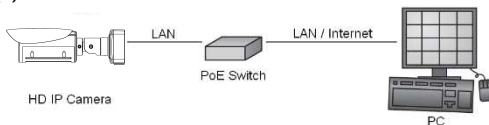

(3). Use a PoE power injector and a network switch to connect to the network.

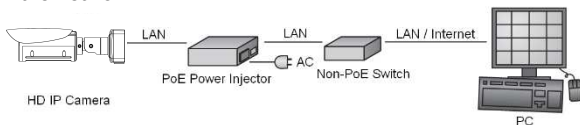

Emergency Factory Default

To restore the hardware to factory default settings, please follow these steps:

1. Press and hold "RESET Key" for 10 seconds and release.
2. Wait for about 40 seconds, and the network LED light should turn off, and go back on again.
3. The camera is now restored to factory default settings, and will reboot automatically.
4. Search for the IP device using the IPScan software.
5. Start the IP device via an Internet browser.
6. Enter the default username "admin" and password "pass" to operate.

NOTE: For your convenience, the IP address will revert to the default setting of 192.168.0.200.

Before Accessing IP Cameras

Before accessing the IP camera, make sure that the camera's RJ-45 network, audio, and power cables are properly connected. To set the IP address, consult your network administrator for an available IP address. The default IP address for each IP camera is 192.168.0.200. Users can use the default IP address for verifying the camera's network connection.

Software Requirements

Merit LILIN Universal ActiveX software components are required for web interface display of JPEG or H.264 Full HD video. When you login to the IP camera by Internet Explorer, the security warning dialog box will prompt the installation of the LILIN Universal ActiveX. Click **Install** to download it.




Configuring IP Addresses with IPScan Software

To configure an IP address using the IP scan tool, you can copy the IPScan software from the installation CD, and paste to your computer. Alternatively, you can execute the IPScan software from the installation CD, or download the software from the Merit LILIN website (www.meritlilin.com). To change the settings of the IP

address, subnet mask, gateway, or HTTP port, you can follow the steps below:

1. Run the IPScan software.
2. Click **Refresh**. All available devices should be listed in the device list.
3. Select your device from the list provided.
4. Change the IP address, subnet mask, gateway, or HTTP port for the IP camera.
5. Click **Apply** to submit the settings.
6. Click **Refresh** to verify the settings.

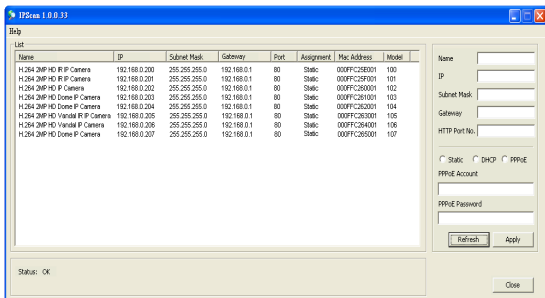

Configuring IP Addresses via Web Interface


To change an IP address via web interface, type the default IP address (192.168.0.200) in the Internet browser and follow the steps below:

1. Login to the H.264 Full HD IP camera by the default username "admin" and default password "pass"
2. Click **Basic Mode** configuration hyperlink.
3. Click **Network->General** hyperlink.

4. Change the IP address, subnet mask, gateway, or HTTP port for the IP camera.
5. Click **Submit** to verify the settings.

Internet Browser Settings & Application Required

Make sure your Internet browser allows the signed ActiveX plug-in to work on your computer. Set "Download Signed ActiveX plug-in controls" to "Prompt" and "Run ActiveX control and plug-in" to "Enable". You can set this option via Internet Explorer-> Tools-> Options-> Security Settings.

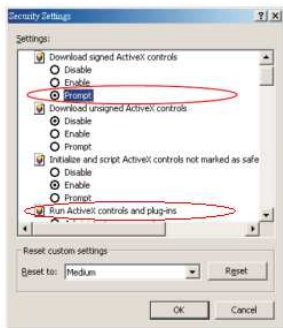

Once complete, you can access the IP camera's live video by entering the default IP address via your Internet browser. As the security warning dialog box appears, click **OK** to download the ActiveX directly from the IP camera.

Login

There are two levels of user authentication, including admin and guest, that can access the IP camera. Administrator is authorized to reset basic mode settings and see live video, while the guest is allowed to see only live video.



The default usernames and passwords are as follows:

	Administrator
Username	admin
Password	pass

To logon the H.264 FULL HD IP camera, please type username and password in logon HTML page and click on Submit button to enter the system.

Creativity, Progress, and Excellence



MERIT LILIN ENT. CO., LTD

www.meritlilin.com

66-ZR8022CSM