


LILIN

AHD COLOR DOME CAMERA

Installation Guide

Part Description & Dimensions

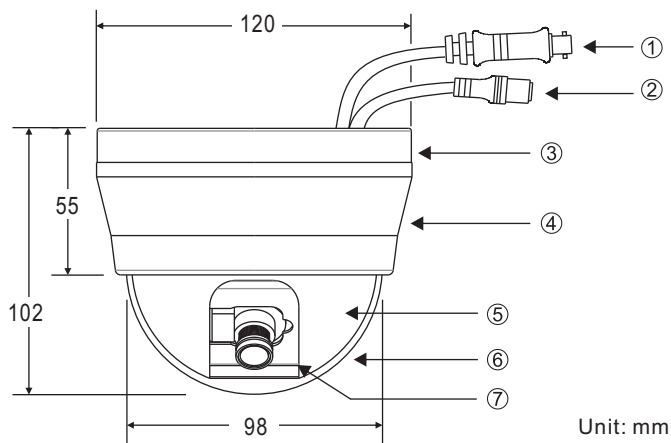

- ① VIDEO OUTPUT JACK
- ② DC POWER INPUT JACK (DC12V $\pm$ 10%)
- ③ BASE
- ④ FIXED RING
- ⑤ INSIDE COVER
- ⑥ DOME COVER
- ⑦ LENS




66-AHD212ACSE-2


Warning: Do not throw your product in municipal waste.
This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulation for disposal of electronics products.

Installation

1. Loosen the screws on the bracket to turn the camera to the desired angle and then tighten the screws.

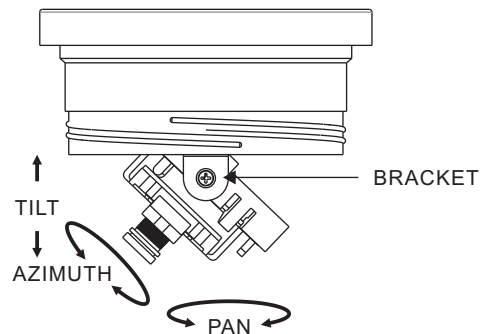

2. Connect to an Up-the-Coax (UTC) digital recorder that supports the AHD-Coaxial protocol. Then use the 8-directional buttons to adjust settings for the best images.

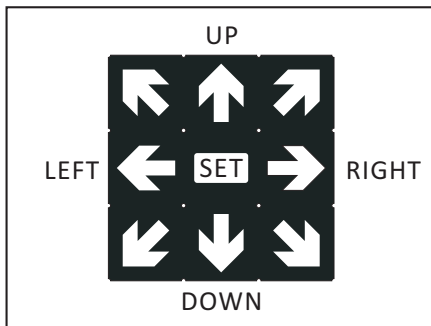

2-1. USER OSD SETTING

- A.  (UP) : Press to move the cursor upwards or to select items.
- B.  (LEFT) : Press to move the cursor to the left and to select or adjust the parameters of the selected item.
The parameters changes each time this button is pressed.
- C.  (RIGHT) : Press to move the cursor to the right and select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- D.  (DOWN) : Press to move the cursor downwards or to select items.
- E. SET : Executes selections and displays a submenu for an item with the  mark.