


LILIN

AHD DOME IR CAMERA

Installation Guide

Part Description & Dimensions

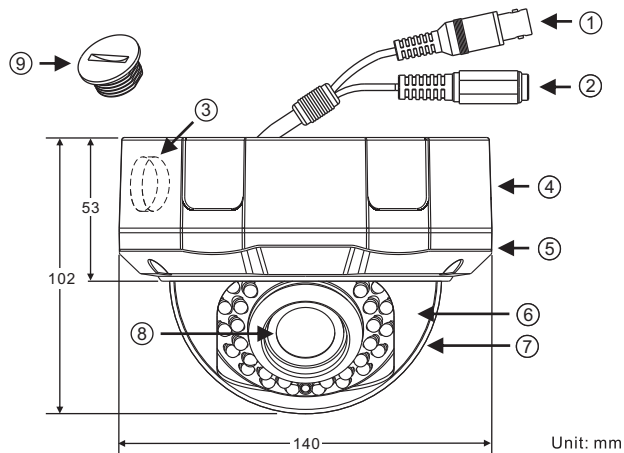



- | | |
|---|---------------|
| ① VIDEO OUTPUT JACK | ⑥ INNER COVER |
| ② DC POWER INPUT JACK (DC12V $\pm$ 10%) | ⑦ DOME COVER |
| ③ SIDE HOLE | ⑧ LENS |
| ④ BOTTOM CHASSIS | ⑨ HOLE PLUG |
| ⑤ TOP COVER | |

Unit: mm





66-AHD62ACSE-2

Warning: Do not throw your product in municipal waste. This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulation for disposal of electronics products.

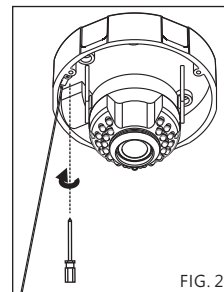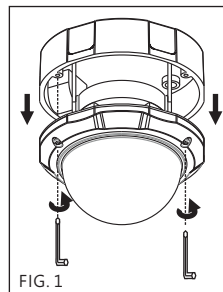



- Secure the safety rope onto the bottom chassis (FIG.2). Then tighten the truss head screws (M4.0x25), on which the O rings are put (FIG.3), on the 4 mounting holes of the bottom chassis (FIG.4). Secure the bottom chassis to the desired location.

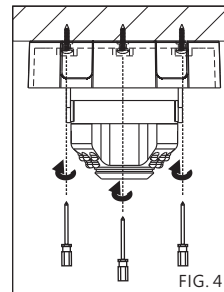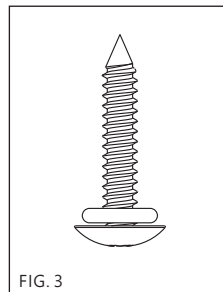


Installation

- Please use the enclosed hexagon screwdriver to loosen the 3 screws on the cover (FIG.1).

- Insert the video cable and power cable through the tube, and connect the video output jack and the DC power input jack of the camera (FIG.5). Then screw the tube into the side hole of the bottom chassis (FIG.6).

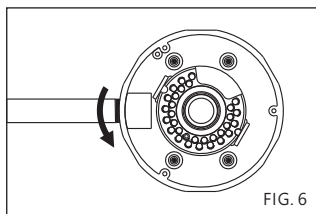
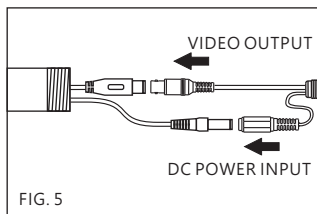


4. Adjust the pan, tilt and azimuth of the camera to the desired location (FIG.7).

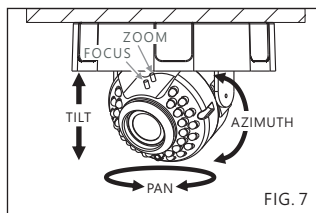


5. Rotate the focus and zoom knobs for optimal video images. Remember to tighten the screws once the adjustment is completed (FIG.7).

6. Fix the safety rope on the top cover with a screwdriver (FIG.8). Replace the top cover and tighten the screws (FIG.9).

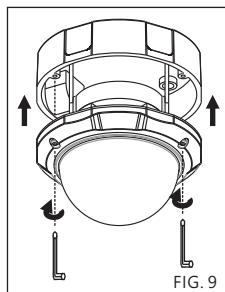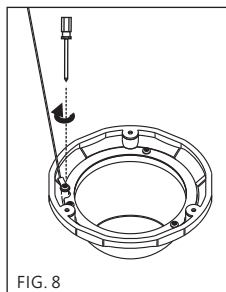

7. Connect to an Up-the-Coax (UTC) digital recorder that supports AHD-Coaxial protocol. Then use the 8-directional buttons (FIG.10) to adjust settings for the best images.

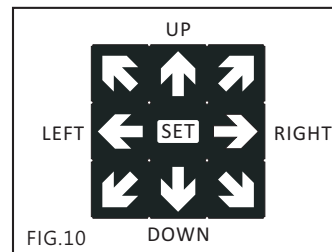

7-1. USER OSD SETTING

- A. **↑ (UP)** : Press to move the cursor upwards or to select items.
- B. **← (LEFT)** : Press to move the cursor to the left and to select or adjust the parameters of the selected item.
The parameters changes each time this button is pressed.
- C. **→ (RIGHT)** : Press to move the cursor to the right and select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- D. **↓ (DOWN)** : Press to move the cursor downwards or to select items.
- E. **SET** : Executes selections and displays a submenu for an item with the  mark.