


LILIN

AHD IR CAMERA

Installation Guide

Part Description & Dimension

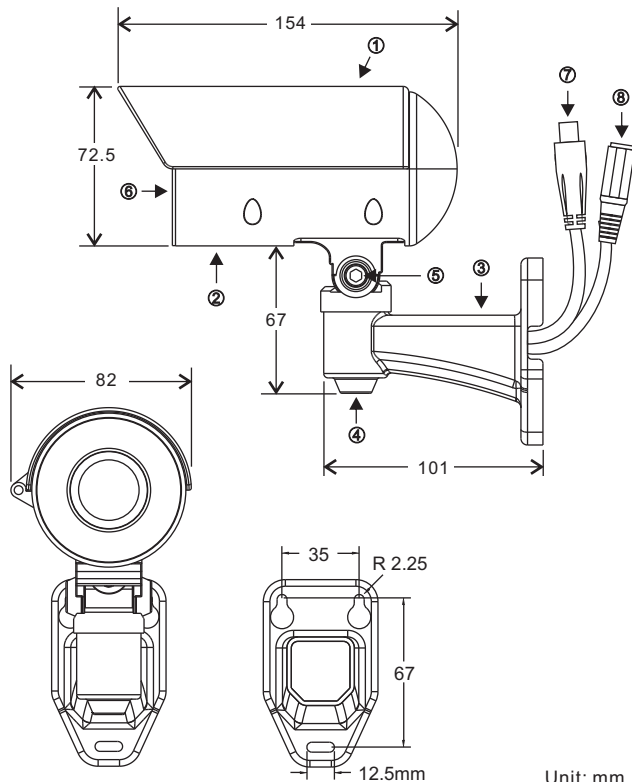

Unit: mm





66-AHD702ACSE-3

Warning: Do not throw your product in municipal waste.
This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulation for disposal of electronics products.


- | | |
|------------------------|------------------------------------|
| ① TOP COVER | ⑤ TILT ADJUSTMENT SCREW |
| ② BOTTOM CHASSIS | ⑥ WINDOW |
| ③ BRACKET | ⑦ VIDEO OUTPUT JACK |
| ④ PAN ADJUSTMENT SCREW | ⑧ DC POWER INPUT JACK (DC12V ±10%) |

Installation


1. Remove the camera from the inner box first. Plug the video cable and power cable to the video output jack and DC power input jack of the camera (FIG.1). Then secure the bracket to the wall (FIG.2).

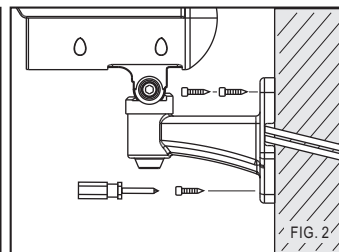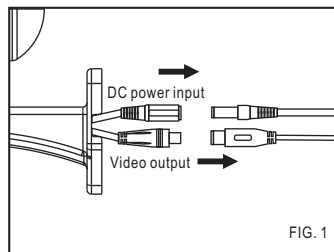

2. Loosen the pan and tilt adjustment screw on the bracket to turn the camera body to the desired angle and then tighten the screws (FIG.3).

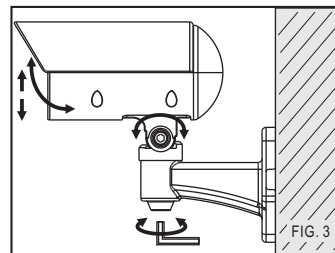


3. For models with vari-focal lens, a screw driver is required to open the top cover of the camera (FIG. 4).


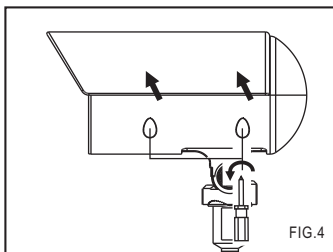


4. Then, adjust the focus and zoom of the lens to optimize video image before tightening the screws (FIG. 5).


Note: Vari Focal model only.

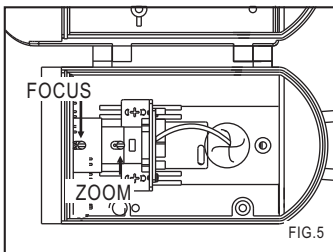

5. Replace the top cover and tighten the screws with a screw driver (FIG. 6 & FIG. 7).

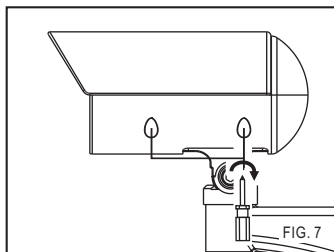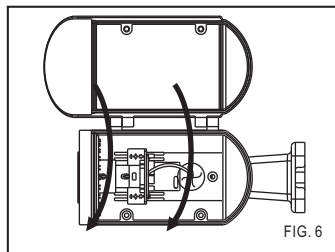

6. Connect to an Up-the-Coax (UTC) digital recorder that supports AHD-Coaxial protocol. Then use the 8-directional buttons (FIG. 8) to adjust settings for the best images.

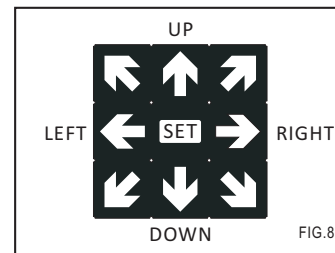

6-1. USER OSD SETTING

- A.  (UP) : Press to move the cursor upwards or to select items.
- B.  (LEFT) : Press to move the cursor to the left and to select or adjust the parameters of the selected item. The parameters change each time this button is pressed.
- C.  (RIGHT) : Press to move the cursor to the right and select or adjust the parameters of the selected item. The parameters change each time this button is pressed.
- D.  (DOWN) : Press to move the cursor downwards or to select items.
- E. SET : Executes selections and displays a submenu for an item with the  mark.