


LILIN

AHD IR CAMERA

Installation Guide

Part Description & Dimension

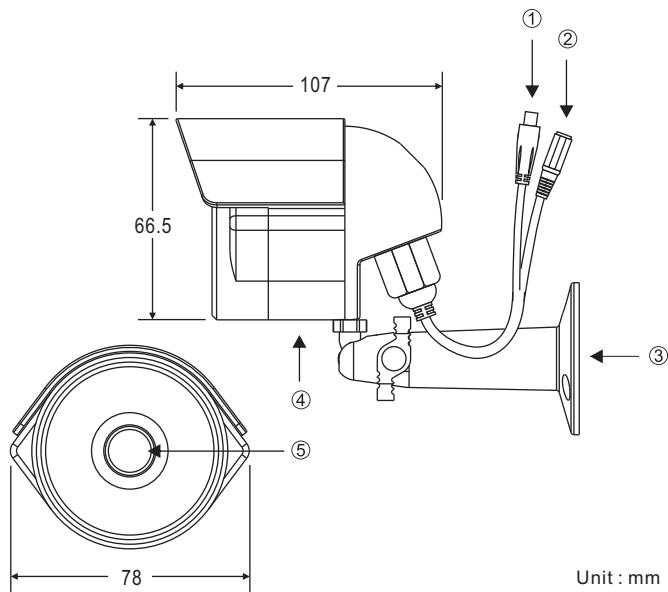

- ① VIDEO OUTPUT JACK
- ② DC POWER INPUT (DC12V ±10%) JACK
- ③ BRACKET
- ④ CAMERA BODY
- ⑤ LENS





66-AHD762ACSE-2



Warning: Do not throw your product in municipal waste.
This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulation for disposal of electronics products.

Installation


1. While installing this camera, please bend the output cable to a "U" shape to prevent water from penetrating the camera through the junction between the output cable and camera (FIG.1 & FIG.2).

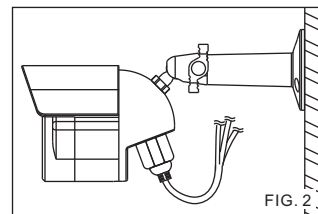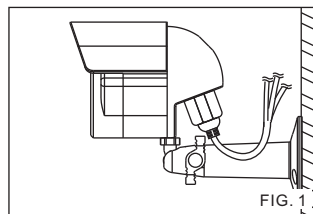

2. To ensure the camera's safety and that the waterproof function works properly, please use adhesive tape to wrap up the connection between the DC power wire and video output wire (FIG.3 & FIG.4).

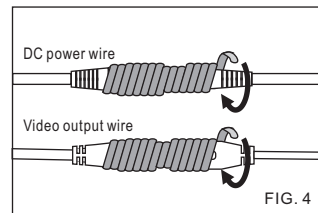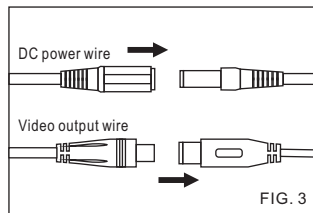

3. Connect to an Up-the-Coax (UTC) digital recorder that supports AHD-Coaxial protocol. Then use the 8-directional buttons (FIG. 5) to adjust settings for the best images.

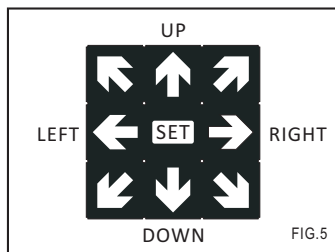

3-1. USER OSD SETTING

- A. (UP) : Press to move the cursor upwards or to select items.
- B. (LEFT) : Press to move the cursor to the left and to select or adjust the parameters of the selected item.
The parameters changes each time this button is pressed.
- C. (RIGHT) : Press to move the cursor to the right and select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- D. (DOWN) : Press to move the cursor downwards or to select items.
- E. SET : Executes selections and displays a submenu for an item with the mark.