


LILIN

AHD IR CAMERA

Installation Guide

Part Description & Dimension

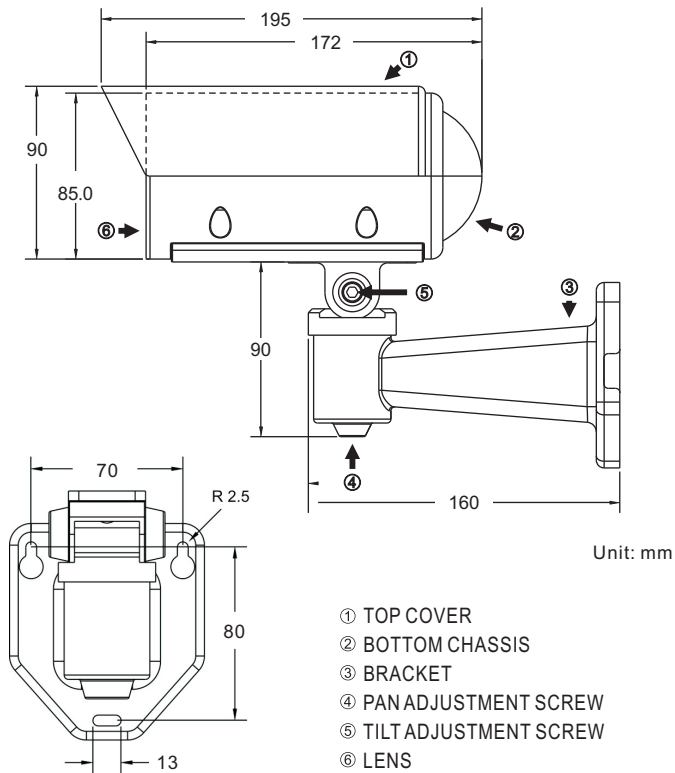

- ① TOP COVER
- ② BOTTOM CHASSIS
- ③ BRACKET
- ④ PAN ADJUSTMENT SCREW
- ⑤ TILT ADJUSTMENT SCREW
- ⑥ LENS




66-AHD772ACSE-3


Warning: Do not throw your product in municipal waste. This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulation for disposal of electronics products.

Installation


- First, remove the bracket from the box. Insert the DC12V power cable and video cables through the bracket and secure it to the wall (FIG.1 & FIG.2).

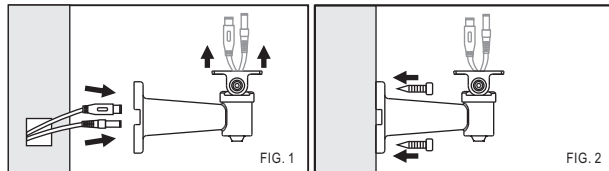


- Remove the camera body from the box and open the top cover with a hex wrench (FIG.3).

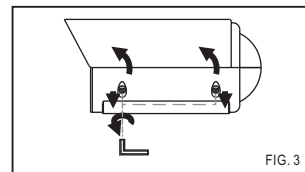


- Insert the DC12V power cable and video cables through the rubber cover and then pull the cables through the bottom of camera body (FIG.4). Connect the DC12V power cable to the DC power input and connect the video cable to video output of the camera (FIG.5).

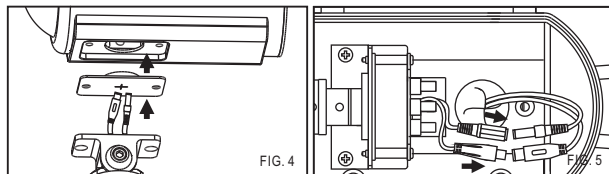


4. Use the provided M5.0x10 screws (2x silver) to secure the camera body to the bracket with a screwdriver (FIG.6).

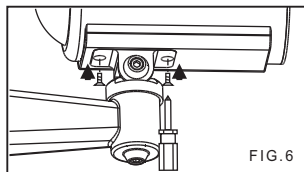



5. Loosen the pan and tilt adjustment screw on the bracket to turn the camera body to the desired angle and then tighten the screw (FIG.7).

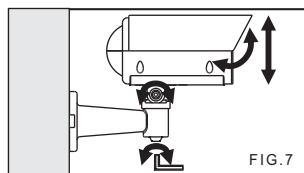


6. Then, adjust the focus and zoom of the lens to optimize video images before tightening the screws(FIG.8).

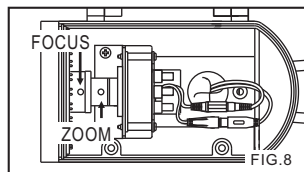

7. Replace the top cover and tighten the screws with a hex wrench (FIG.9&FIG.10).

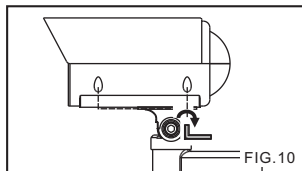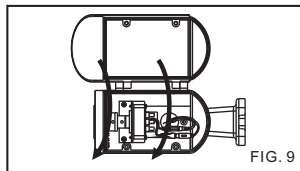

8. Connect to an Up-the-Coax (UTC) digital recorder that supports AHD-Coaxial protocol. Then use the 8-directional buttons (FIG. 8) to adjust settings for the best images.

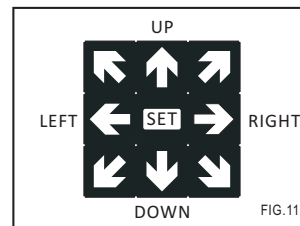

8-1. USER OSD SETTING

- A. **↑ (UP)** : Press to move the cursor upwards or to select items.
- B. **← (LEFT)** : Press to move the cursor to the left and to select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- C. **→ (RIGHT)** : Press to move the cursor to the right and select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- D. **↓ (DOWN)** : Press to move the cursor downwards or to select items.
- E. **SET** : Executes selections and displays a submenu for an item with the  mark.