


LILIN

AHD IR CAMERA

Installation Guide

Part Description & Dimension

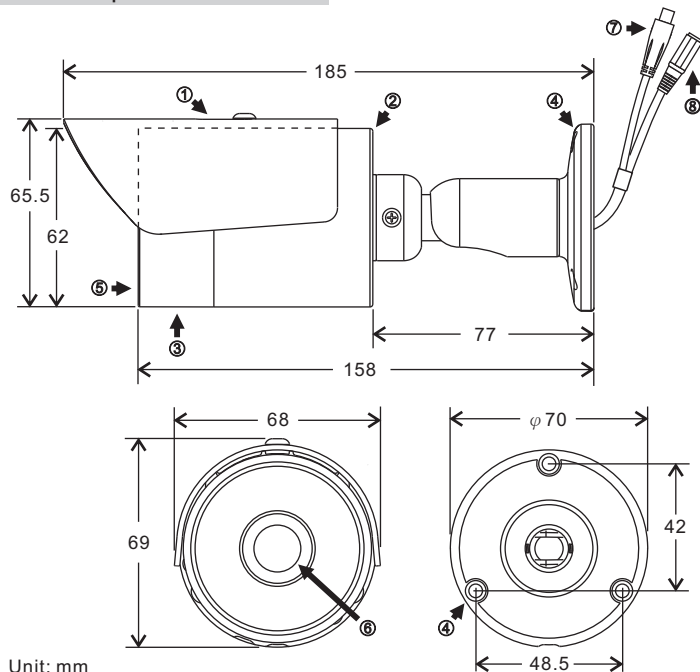

Unit: mm

- | | |
|----------------|---|
| ① SUN SHIELD | ⑤ WINDOWS |
| ② MAIN BODY | ⑥ LENS |
| ③ FRONT COVER | ⑦ VIDEO OUTPUT JACK |
| ④ BRACKET BASE | ⑧ DC POWER INPUT JACK (DC12V $\pm$ 10%) |





66-AHD832ACSE-3



Warning: Do not throw your product in municipal waste.
This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulation for disposal of electronics products.

Installation

1. Remove the camera from the box first. Connect the power cable and video cable to the video output jack and DC power input jack (FIG.1), and then secure the camera to the wall (FIG.2).

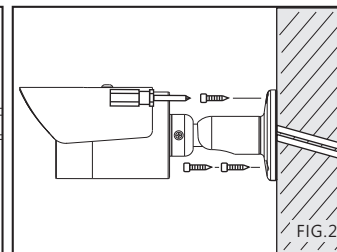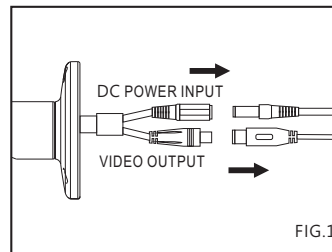

2. Adjust the five adjustment screws to move the camera to the desired angle, and then tighten the adjustment screws (FIG. 3-FIG.8).

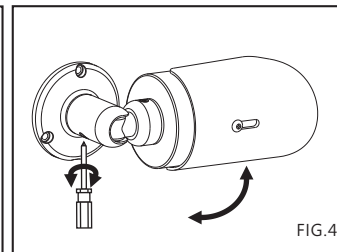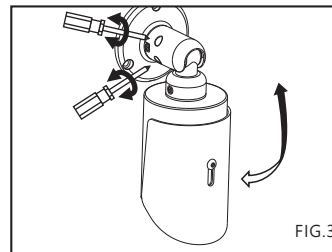

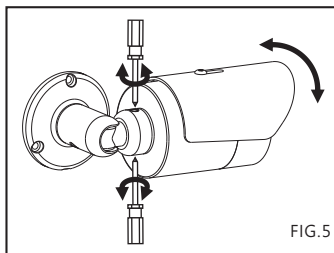


FIG. 5

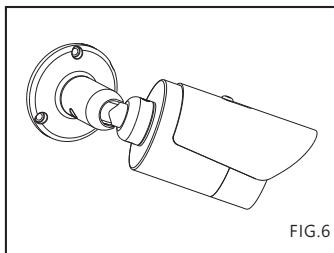


FIG. 6

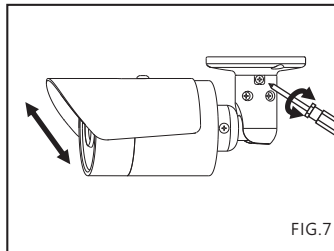


FIG. 7

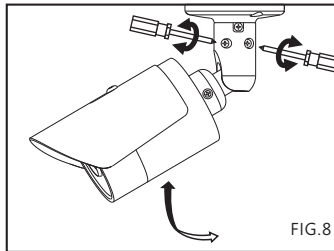


FIG. 8

3-1. USER OSD SETTING

- A. **↑ (UP)** : Press to move the cursor upwards or to select items.
- B. **← (LEFT)** : Press to move the cursor to the left and to select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- C. **→ (RIGHT)** : Press to move the cursor to the right and select or adjust the parameters of the selected item. The parameters changes each time this button is pressed.
- D. **↓ (DOWN)** : Press to move the cursor downwards or to select items.
- E. **SET** : Executes selections and displays a submenu for an item with the  mark.

3. Connect to an Up-the-Coax (UTC) digital recorder that supports AHD-Coaxial protocol. Then use the 8-directional buttons (FIG. 9) to adjust settings for the best images.

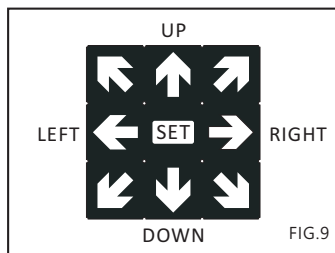


FIG. 9