


D/N 2MP HD DOME IR IP CAMERA

66-6320OE-1B



Instruction Manual

Part Description & Dimensions

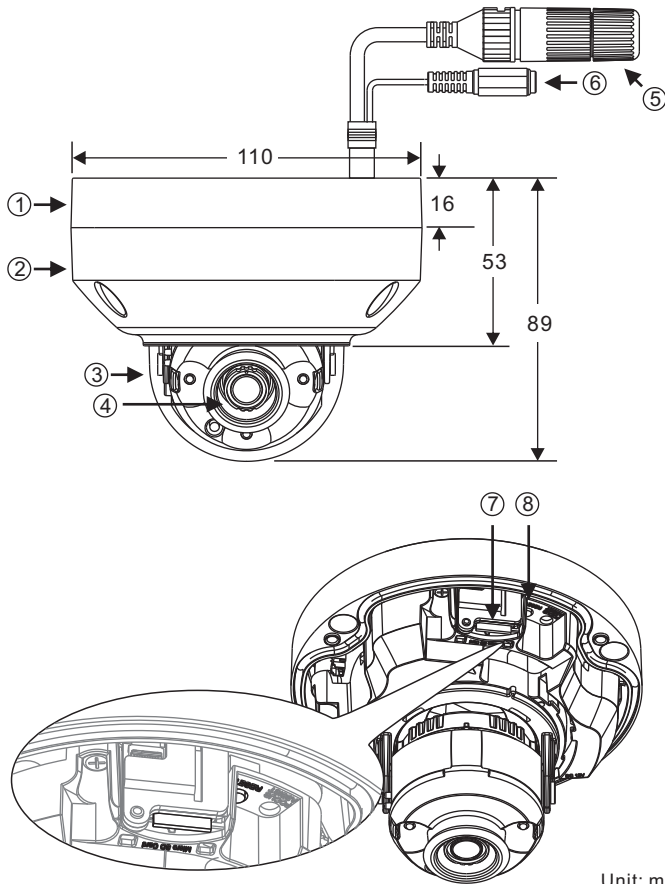


Unit: mm


- | | |
|---------------------|---|
| ① Bottom bracket | ⑤ RJ-45 Ethernet connector (supports PoE) |
| ② Upper cover | ⑥ Power jack (DC12V $\pm$ 10%) |
| ③ Transparent cover | ⑦ Micro SD card slot |
| ④ Lens | ⑧ Factory default button |

Installation


- Retrieve the camera and remove the bottom bracket from the upper cover with a hex key (FIG.1).
Use the included screws (M4.0x25) through the holes marked "a," and fix the camera in the desired location (FIG.2 & FIG.3).

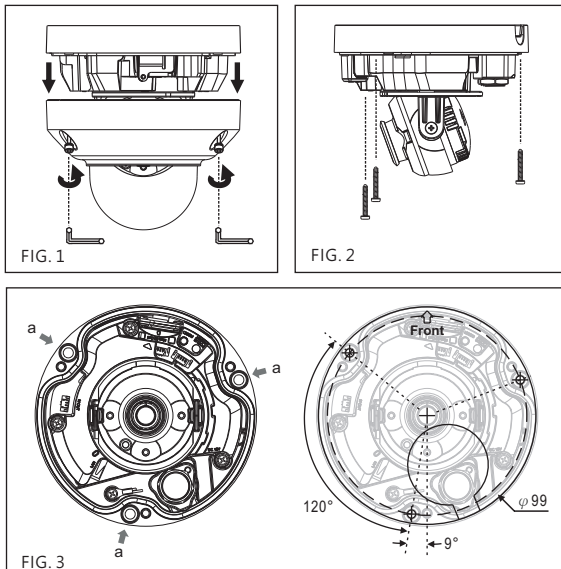


- Adjust the pan, tilt, and azimuth of the camera to the desired location (FIG.4).

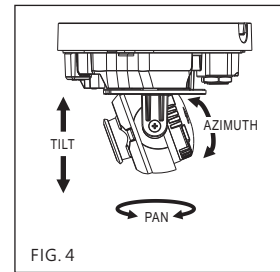


- Attach the Ethernet and power cables to the RJ-45 connector and the DC-in connector, respectively (FIG.5).

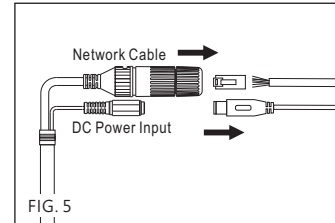

- Connect the RJ-45 Ethernet cable with a waterproof connector. First, remove the waterproof connector and unscrew the waterproof nut. Insert the Ethernet cable and connect to the RJ-45 connector with proper tools (FIG.6). Then, tighten the waterproof connector and nut before the RJ-45 connector is connected to the camera (FIG.7).

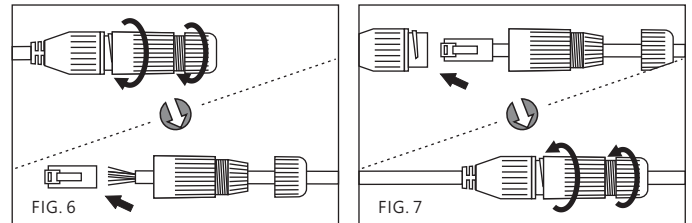


- Secure the upper cover to the bottom bracket with a hex key FIG.8).

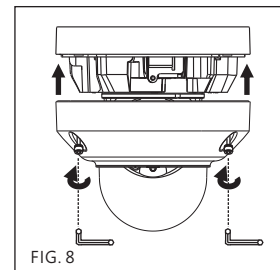


System Architectures

For connecting D/N 1080P HD IP Camera series to the network, please follow one of the system architectures:


- Use DC12V power adaptor and network switch connected to a network.

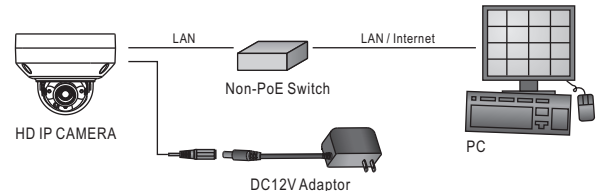

- Use with PoE of the network switch connected to the network.

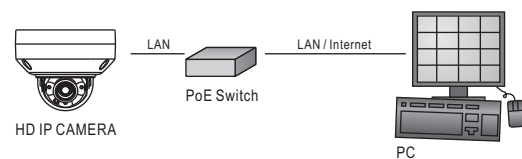

- Use PoE power injector and the network switch connected to the network.

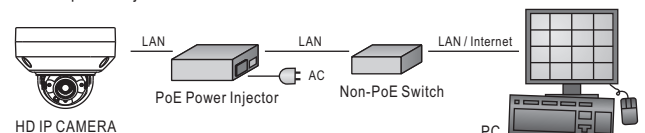

Emergency Factory Default

- To restore the hardware to factory default settings, please follow these steps:
- 1.Press and hold “RESET Key” for 10 seconds and release.
 - 2.Wait for about 40 seconds, and the network LED light should turn off, and go back on again.
 - 3.The camera is now restored to factory default settings, and will reboot automatically.
 - 4.Search for the IP device using the IPScan software.
 - 5.Start the IP device via an Internet browser.
 - 6.Enter the default username “admin” and password “pass” to operate.

NOTE: For your convenience, the IP address will revert to the default setting of 192.168.0.200.

Before Accessing IP Cameras

Before accessing the IP camera, make sure that the camera's RJ-45 network, audio, and power cables are properly connected. To set the IP address, consult your network administrator for an available IP address. The default IP address for each IP camera is 192.168.0.200. Users can use the default IP address for verifying the camera's network connection.


Software Requirements

Universal ActiveX software components are required for web interface display of JPEG or H.264 Full HD video. When you login to the IP camera by Internet Explorer, the security warning dialog box will prompt the installation of the Universal ActiveX. Click **Install** to download it.



Configuring IP Addresses with IPScan Software

- To configure an IP address using the IP scan tool, you can copy the IPScan software from the installation CD, and paste to your computer. Alternatively, you can execute the IPScan software from the installation CD. To change the settings of the IP address, subnet mask, gateway, or HTTP port, you can follow the steps below:
1. Run the IPScan software.
 2. Click **Refresh**. All available devices should be listed in the device list.
 3. Select your device from the list provided.
 4. Change the IP address, subnet mask, gateway, or HTTP port for the IP camera.
 5. Click **Apply** to submit the settings.
 6. Click **Refresh** to verify the settings.

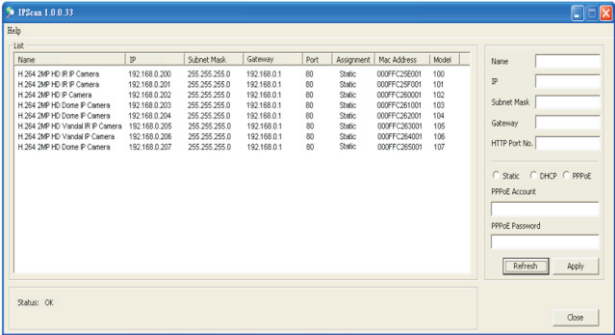


Configuring IP Addresses via Web Interface

To change an IP address via web interface, type the default IP address (192.168.0.200) in the Internet browser and follow the steps below:

1. Login to the H.264 Full HD IP camera by the default username “admin” and default password “pass”.
2. Click **Basic Mode** configuration hyperlink.
3. Click **Network->General** hyperlink.
4. Change the IP address, subnet mask, gateway, or HTTP port for the IP camera.
5. Click **Submit** to verify the settings.

Internet Browser Settings & Application Required

Make sure your Internet browser allows the signed ActiveX plug-in to work on your computer. Set “Download Signed ActiveX plug-in controls” to “Prompt” and “Run ActiveX control and plug-in” to “Enable”. You can set this option via Internet Explorer-> Tools-> Options-> Security Settings.

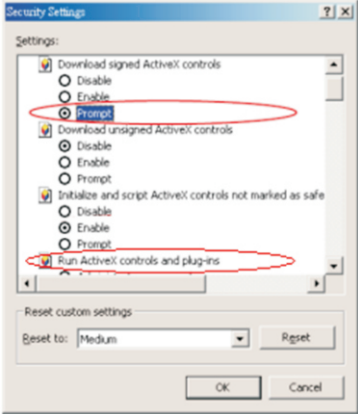

Once complete, you can access the IP camera's live video by entering the default IP address via your Internet browser. As the security warning dialog box appears, click **OK** to download the ActiveX directly from the IP camera.

Login

There are two levels of user authentication, including admin and guest, that can access the IP camera. Administrator is authorized to reset basic mode settings and see live video, while the guest is allowed to see only live video.



The default usernames and passwords are as follows:

	Administrator
Username	admin
Password	pass

To logon the H.264 FULL HD IP camera, please type username and password in logon HTML page and click on Submit button to enter the system.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.